


# ASSEMBLY INSTRUCTIONS

ITEM#: HN7009

## Important Safety Instructions:


- Please read all instructions before beginning assembly
- Please make sure receive all the parcels to start the assembly
- For your safety and convenience, assembly by two people is recommended
- Use the parts and hardware lists to identify and separate each of the components included
- Save all packing materials until assembly is completed to avoid the accidental discarding of smaller parts or hardware

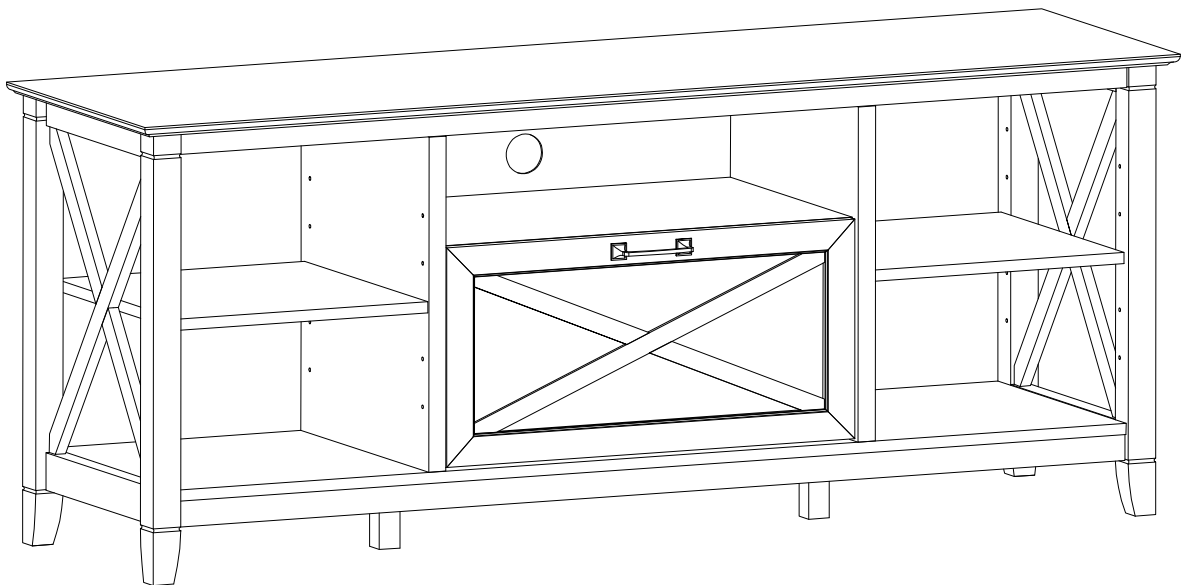











THANK YOU FOR PURCHASING






# PARTS LIST

|       |       |       |       |       |
|-------|-------|-------|-------|-------|
| 1 X1  | 2 X2  | 3 X1  | 4 X1  | 5 X1  |
| 6 X1  | 7 X2  | 8 X1  | 9 X1  | 10 X1 |
| 11 X2 | 12 X1 | 13 X1 | 14 X1 | 15 X1 |
| 16 X1 | 17 X1 |       |       |       |

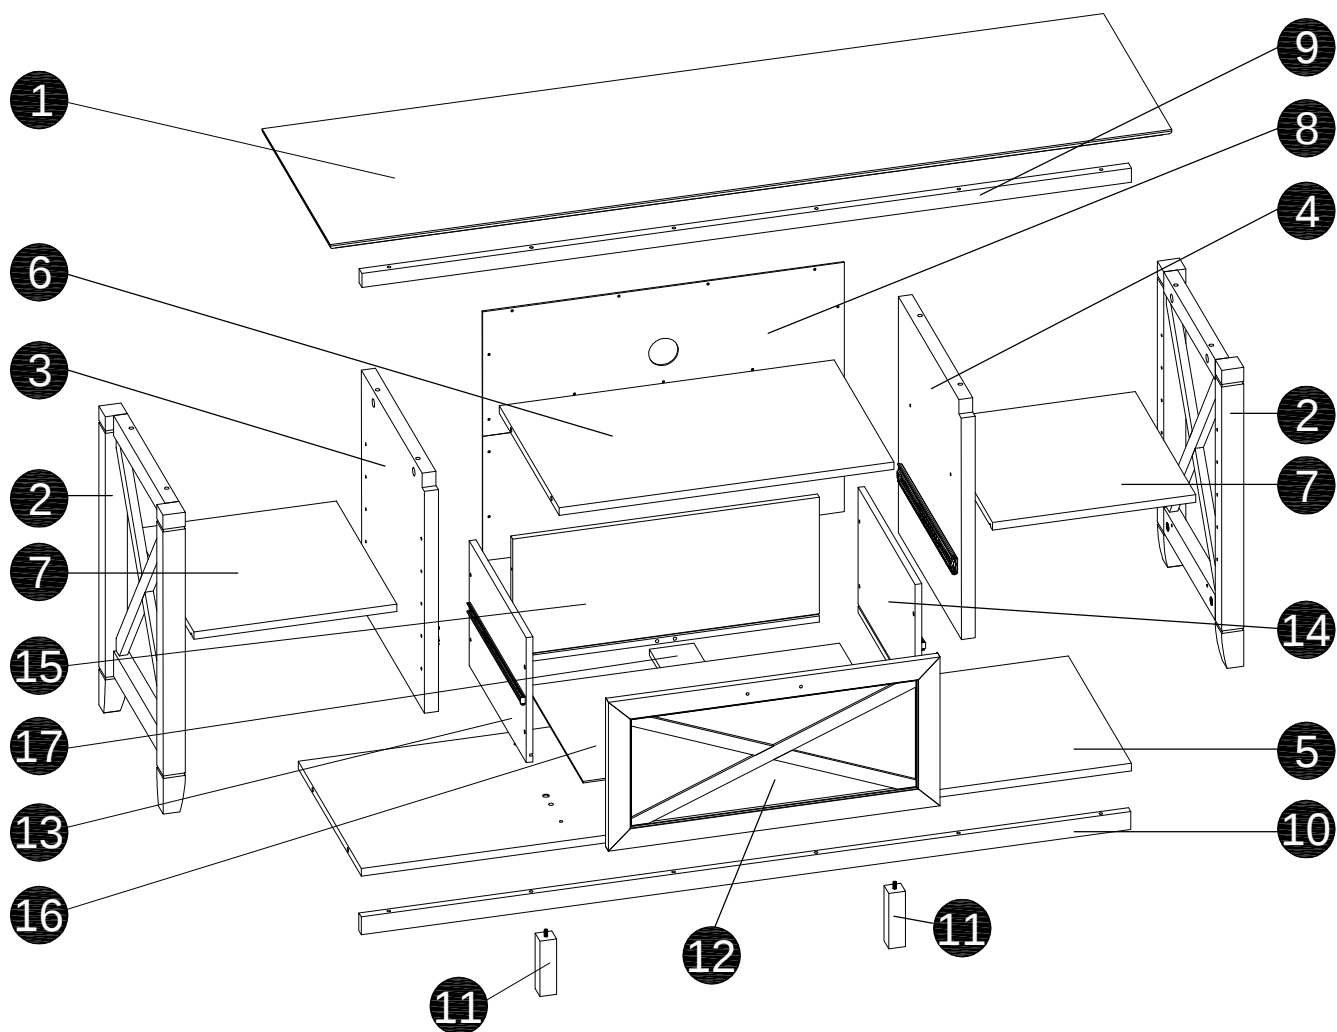


# HARDWARE LIST

| Name | Part                                                                                                | Qty. | Spare |
|------|-----------------------------------------------------------------------------------------------------|------|-------|
| A    |                    | 16   | 1     |
| B    |                    | 16   | 1     |
| C    |                    | 2    | 1     |
| D    |                    | 2    | 1     |
| E    |                    | 2    | 1     |
| F    |                  | 1    |       |
| G    | <br>1" Bolt      | 2    | 1     |
| H    |                  | 8    |       |
| I    |                  | 8    |       |
| J    | <br>2" Screw     | 4    |       |
| K    | <br>1-1/2" Screw | 6    |       |
| L    | <br>1-1/4" Screw | 12   |       |
| M    | <br>9/16" Screw  | 4    |       |
| N    | <br>1/2" Screw   | 4    |       |




| Name | Part                                                                                               | Qty. | Spare |
|------|----------------------------------------------------------------------------------------------------|------|-------|
| O    | <br>9/16" Screw | 19   | 1     |
| S    |                 | 2    |       |
| U1   |                 | 2    |       |
| U2   |                 | 2    |       |
| U3   |                 | 4    |       |
| U4   |                | 2    |       |
| U5   |                | 2    |       |

## STEP 1

**A** x 4pcs





**E** x 2pcs

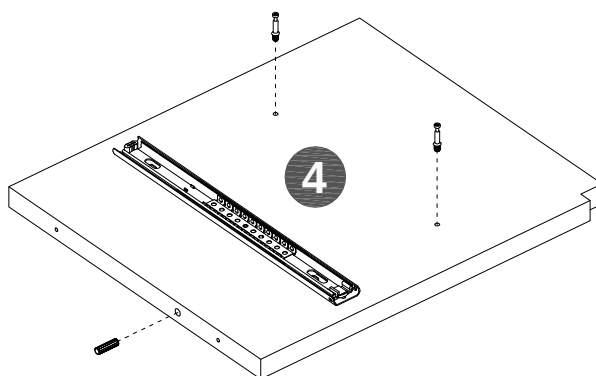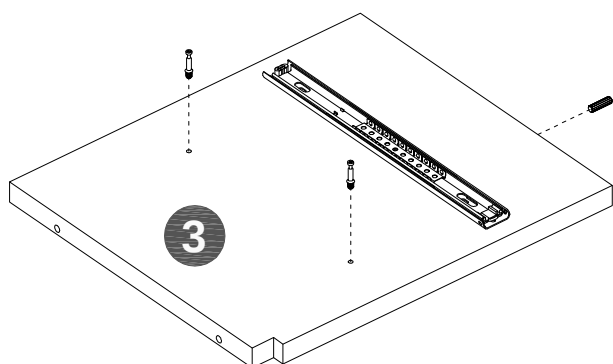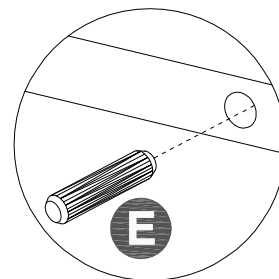




## STEP 2

**B** x 4pcs

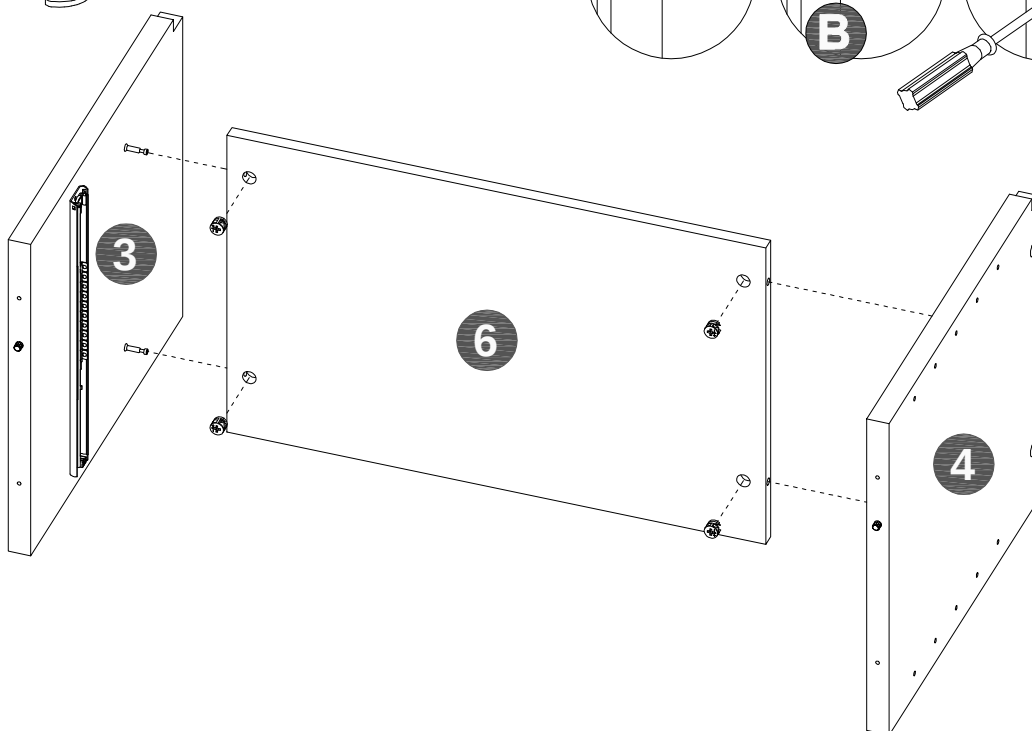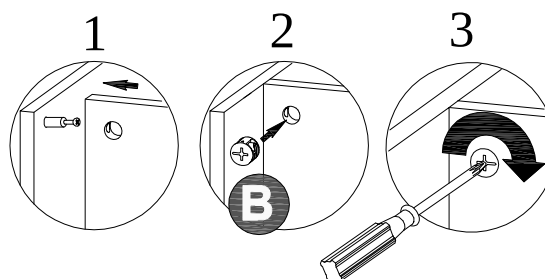



## STEP 3

**L** x 6pcs

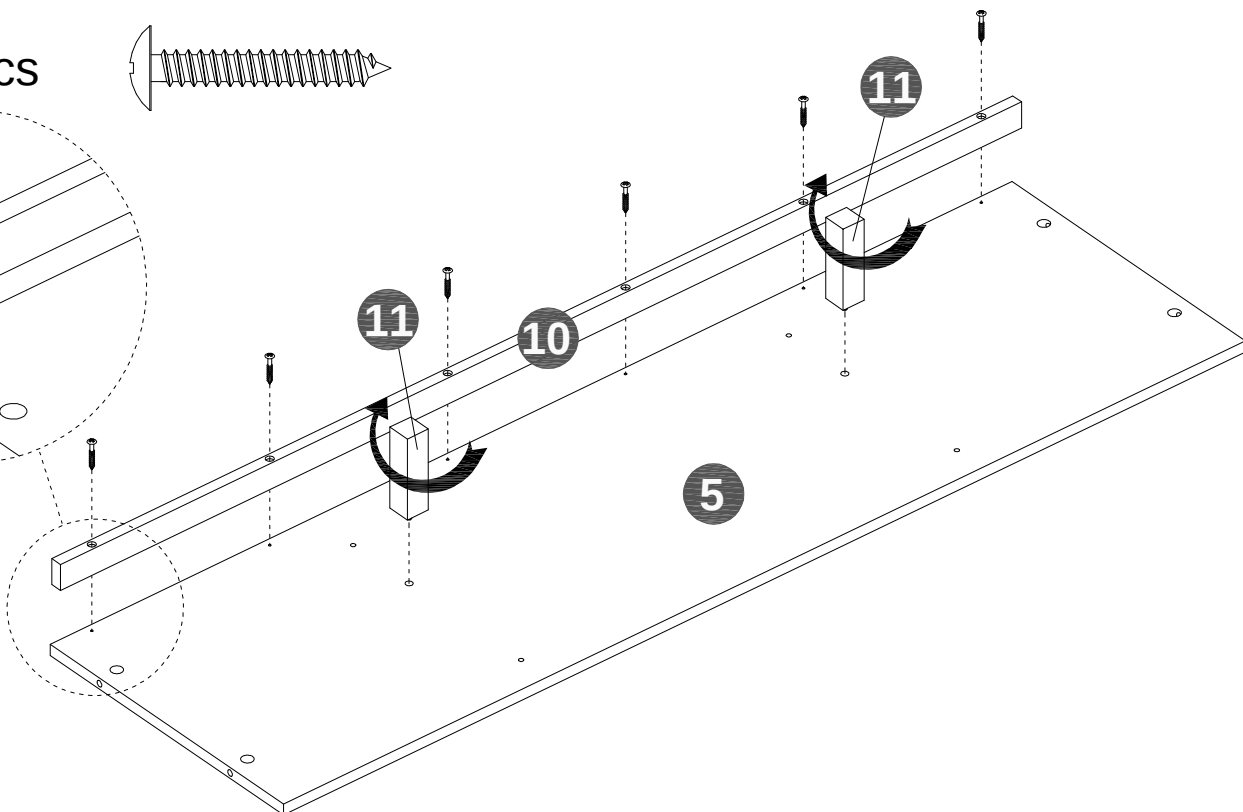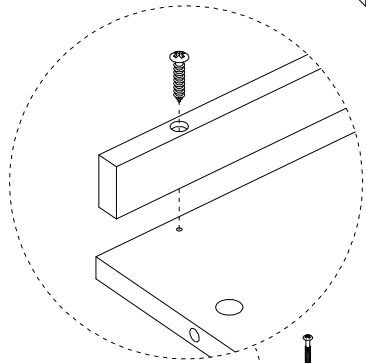





## STEP 4

**J** x 4 pcs

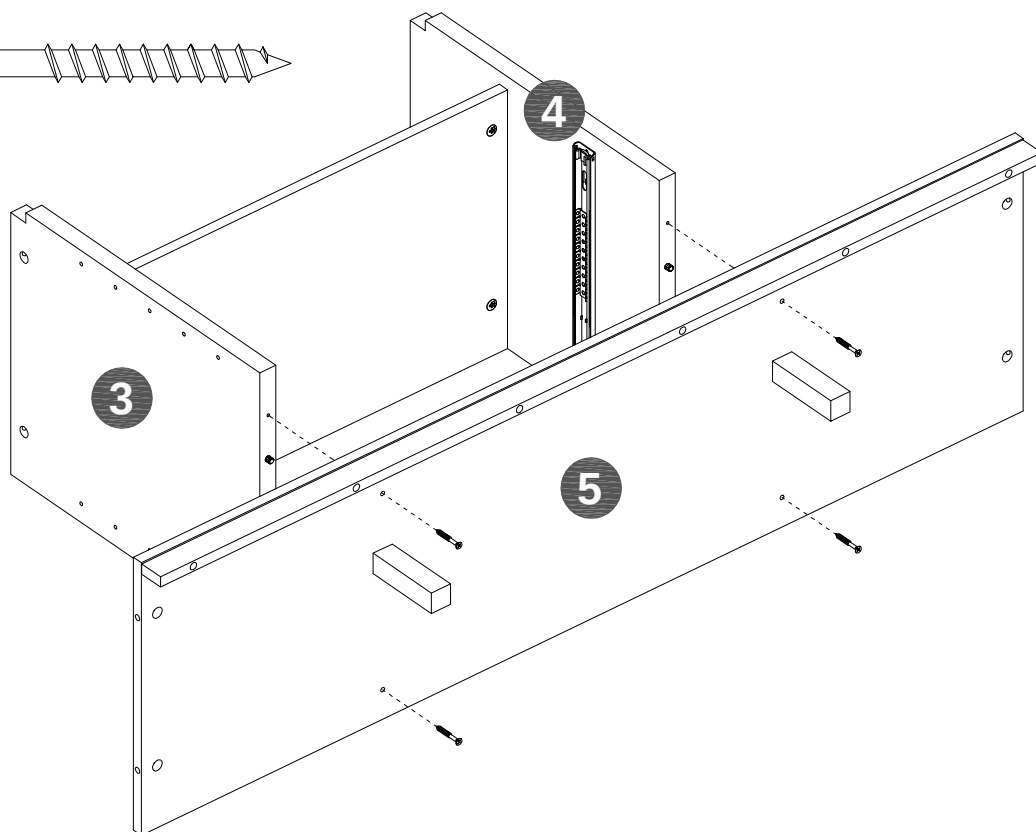



## STEP 5

**A** x 4pcs

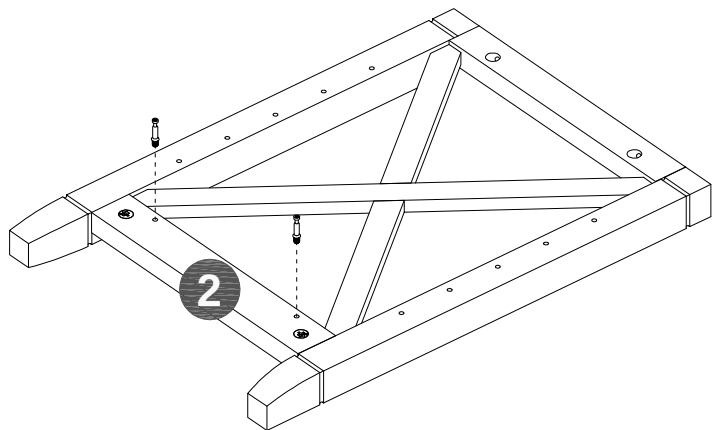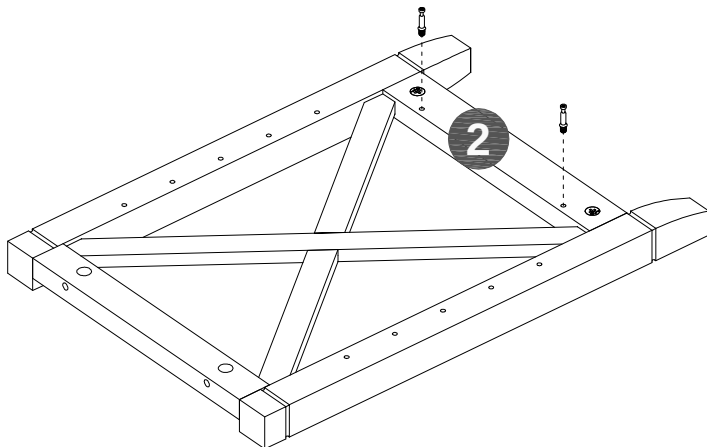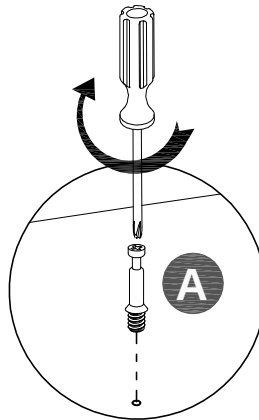



## STEP 6

**B** x 4pcs

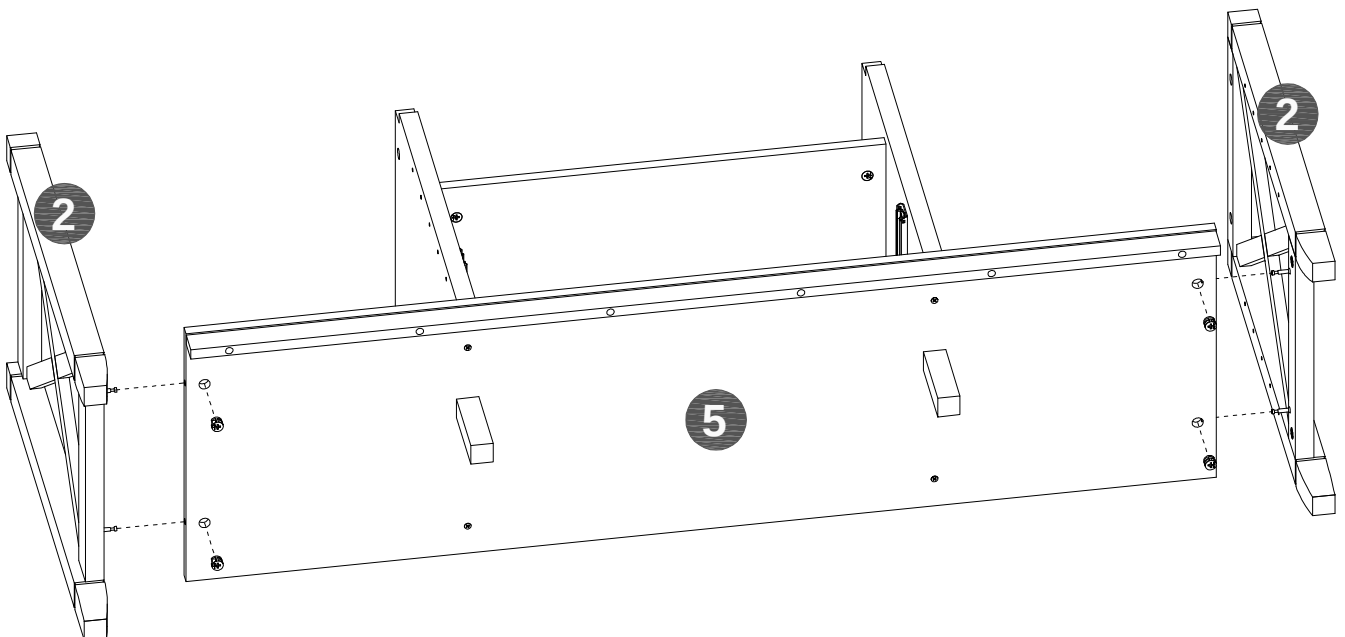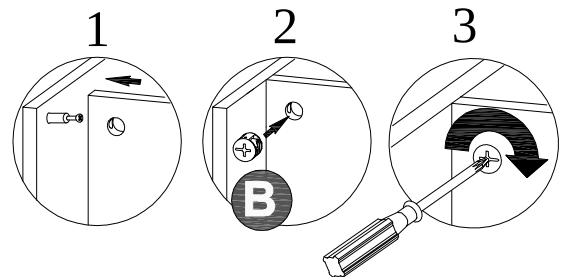



## STEP 7

**A** x 8pcs

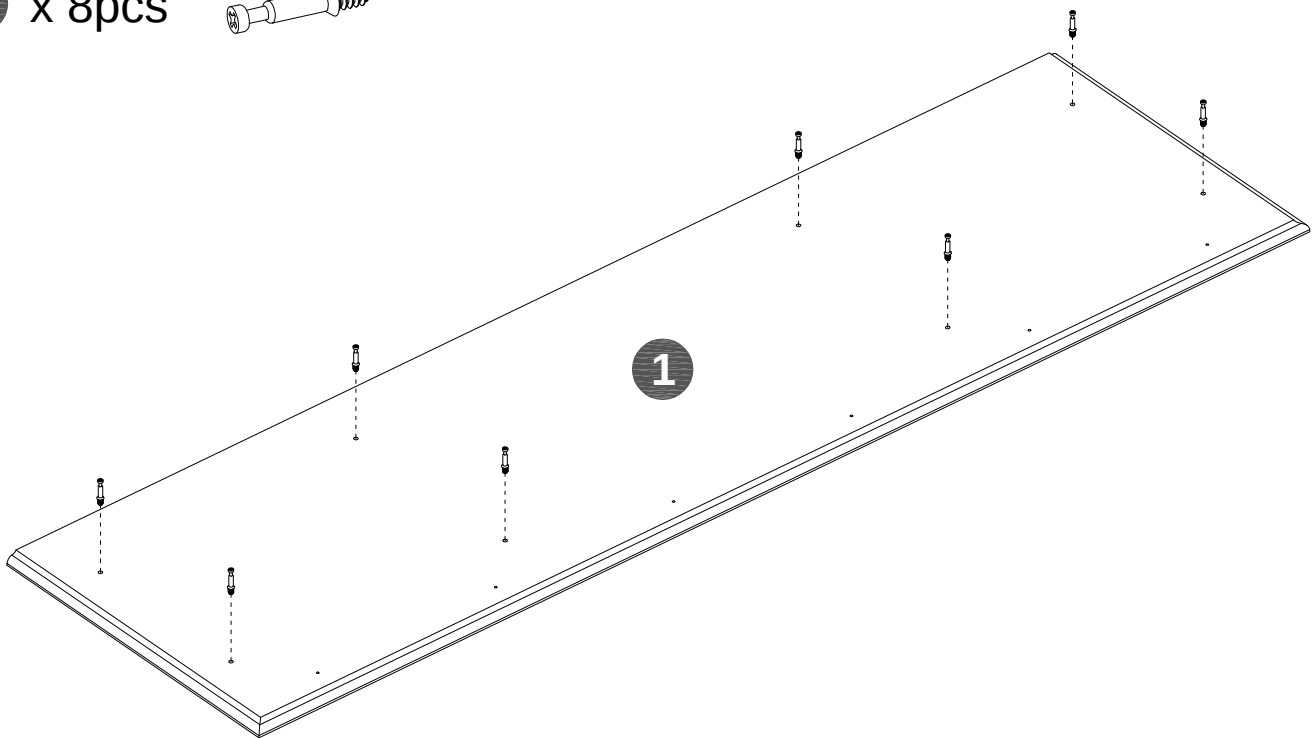

## STEP 8

**L** x 6pcs

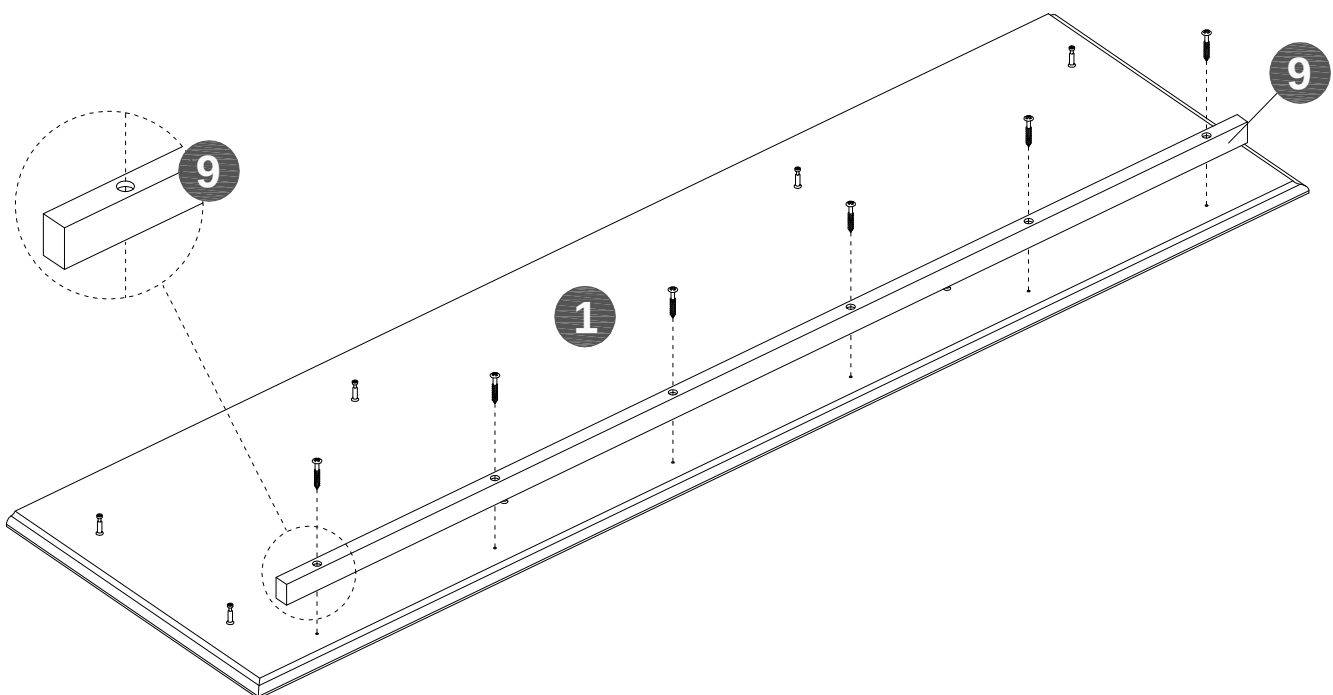



## STEP 9

With assistant carefully stand unit up.


**B** x 8pcs




**H** x 8pcs

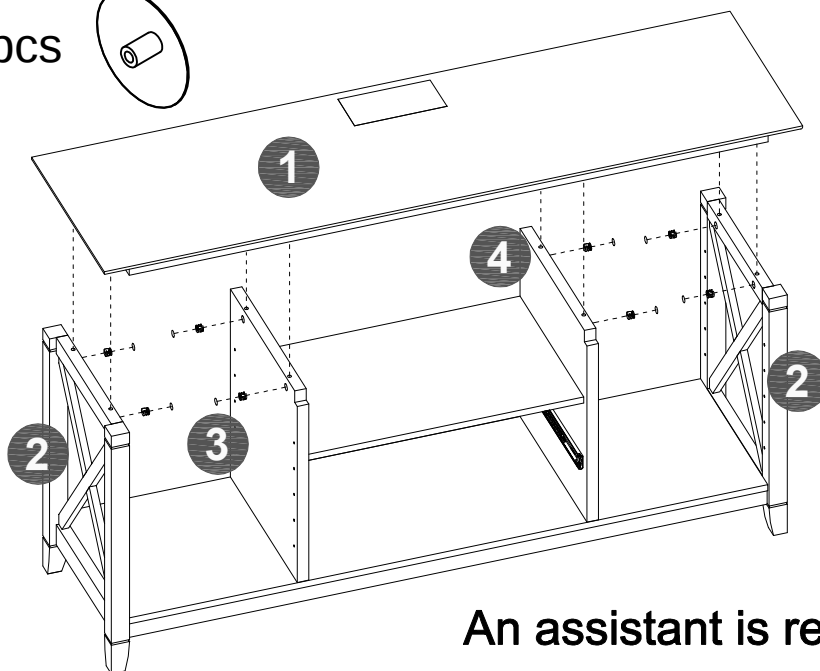


An assistant is required.

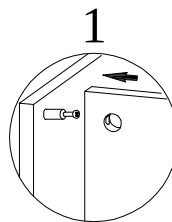


2

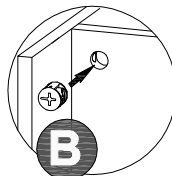

3

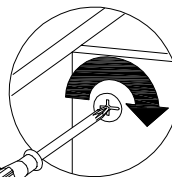


4

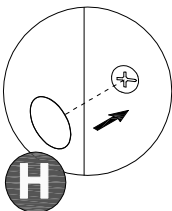



## STEP 10

**O** x 19pcs



1mm  
1/25"



2mm  
2/25"

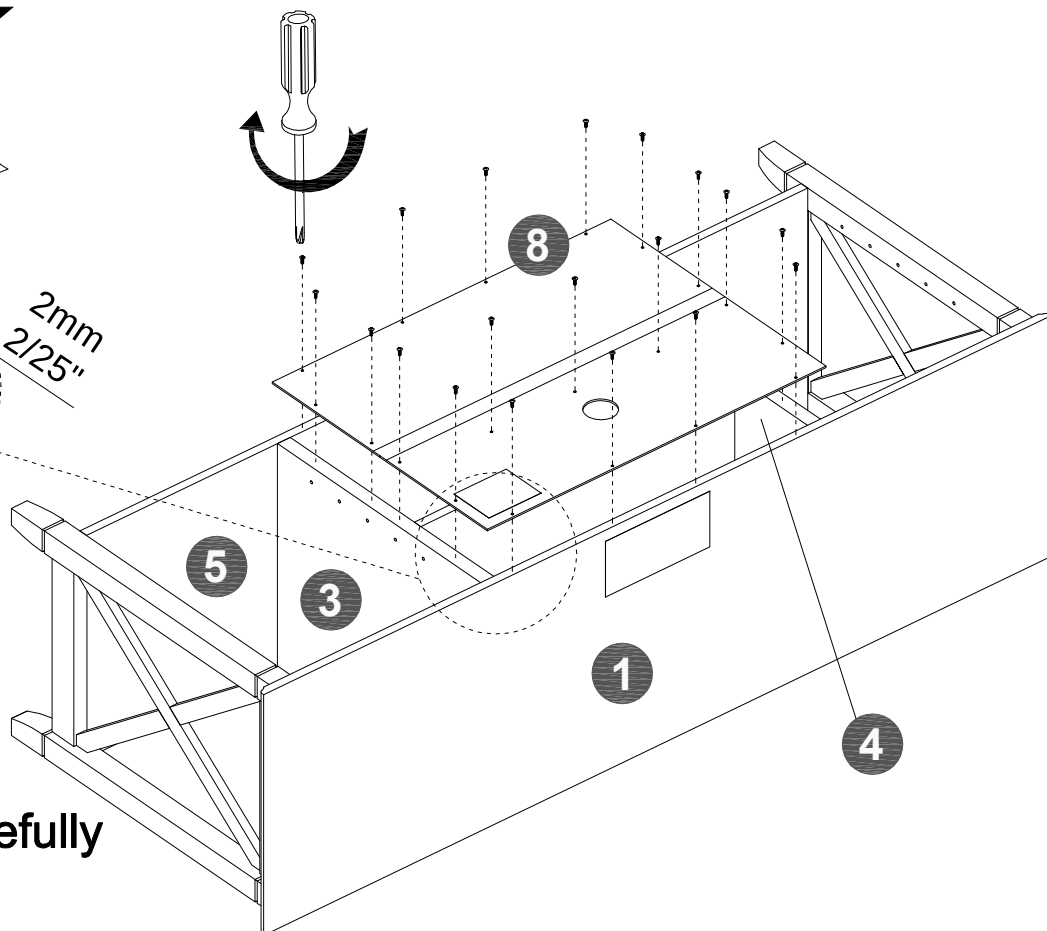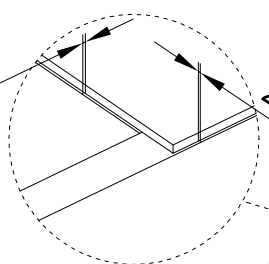


With assistant carefully  
flip unit over.

## STEP 11

1 x 8pcs

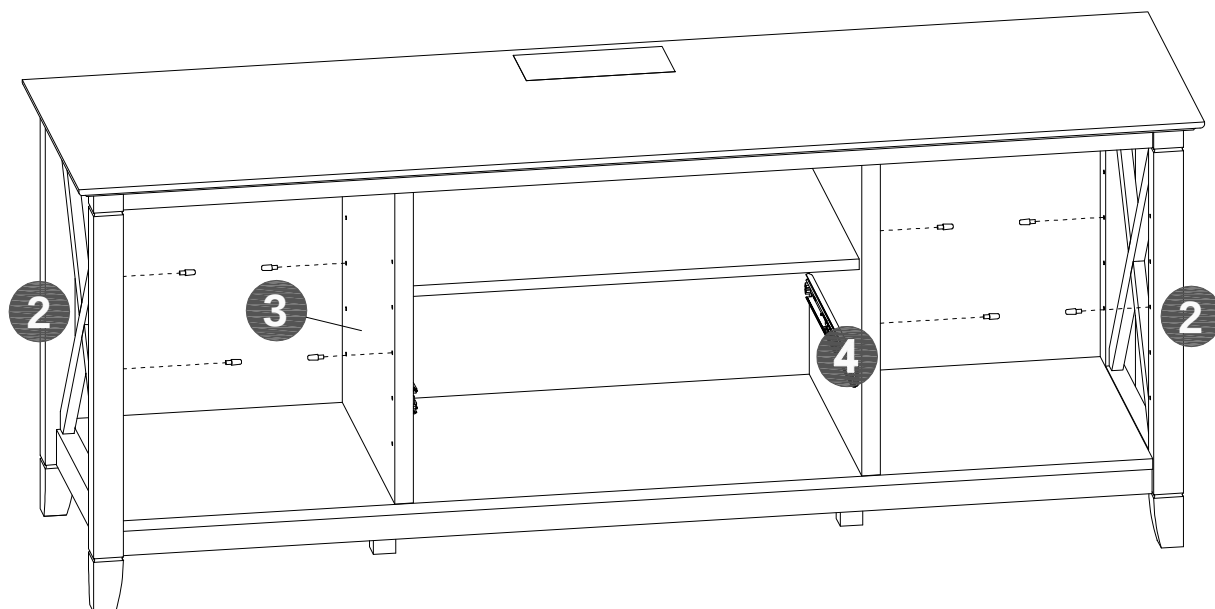


## STEP 12

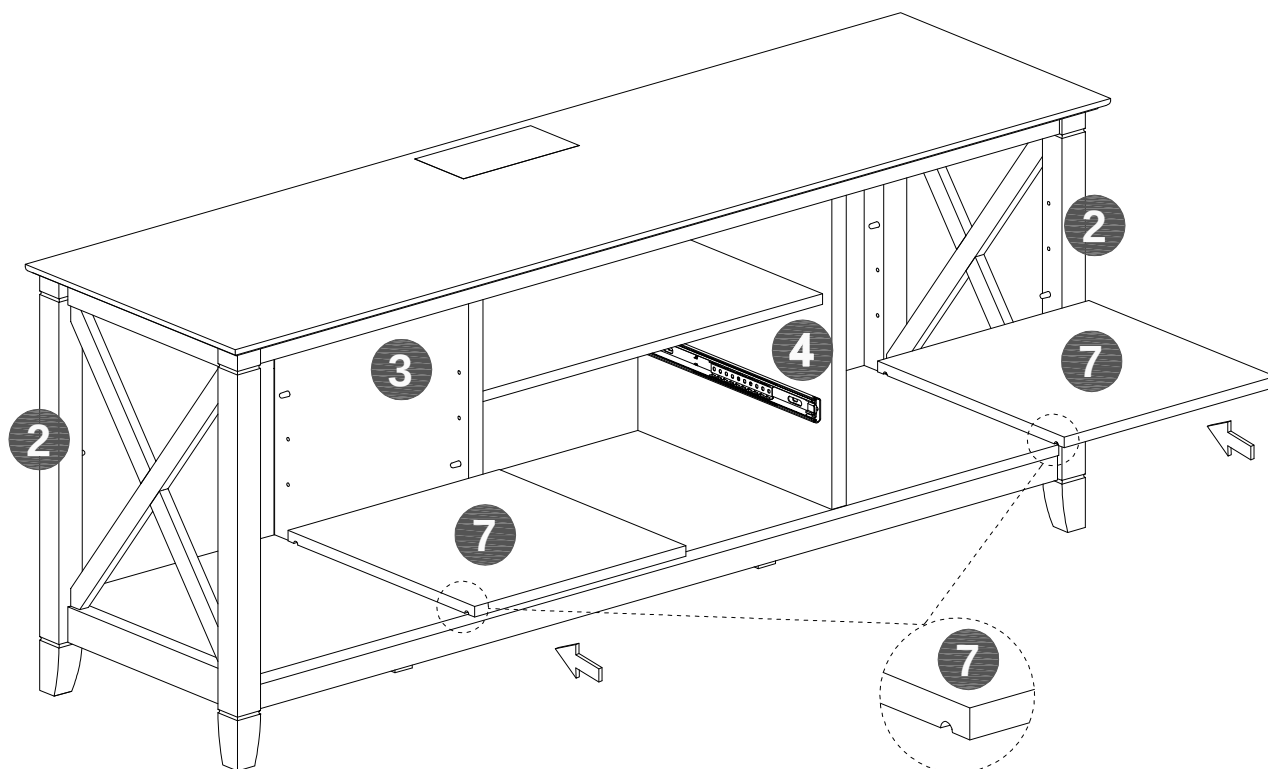


## STEP 13



**M** x 4pcs



**C** x 2pcs




**S** x 2pcs

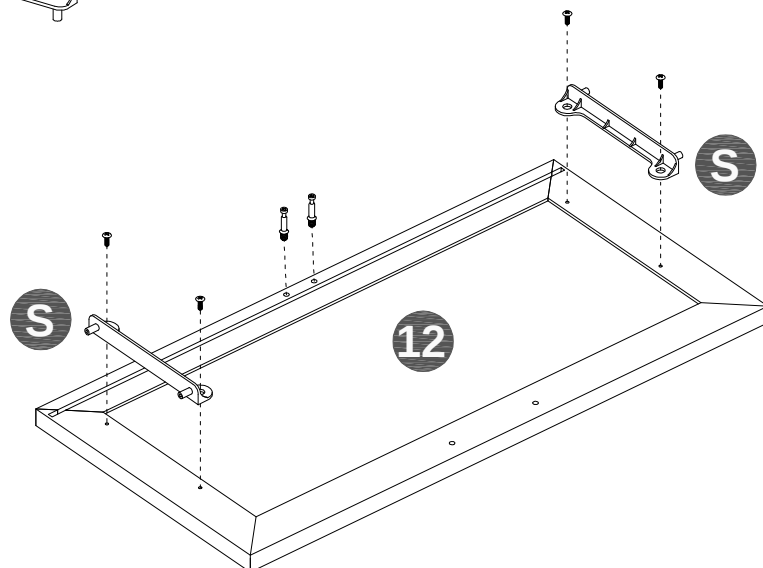

## STEP 14






**N** x 4pcs



**D** x 2pcs




**K** x 6pcs

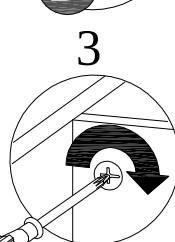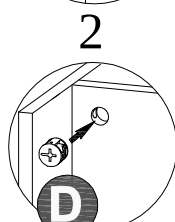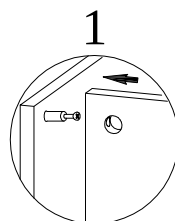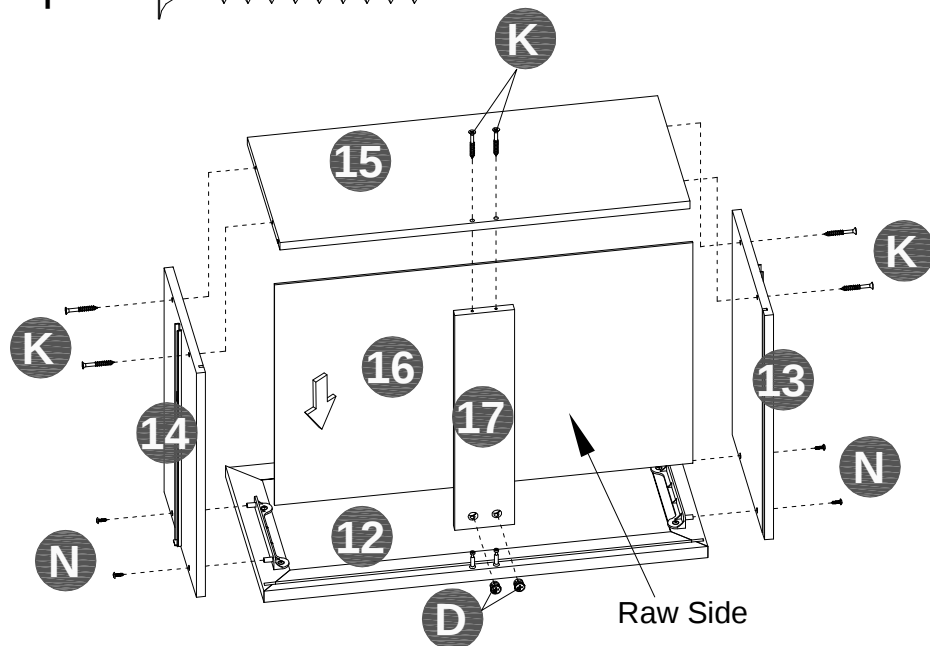

## STEP 15

**F** x 1pc 

**G** x 2pcs 

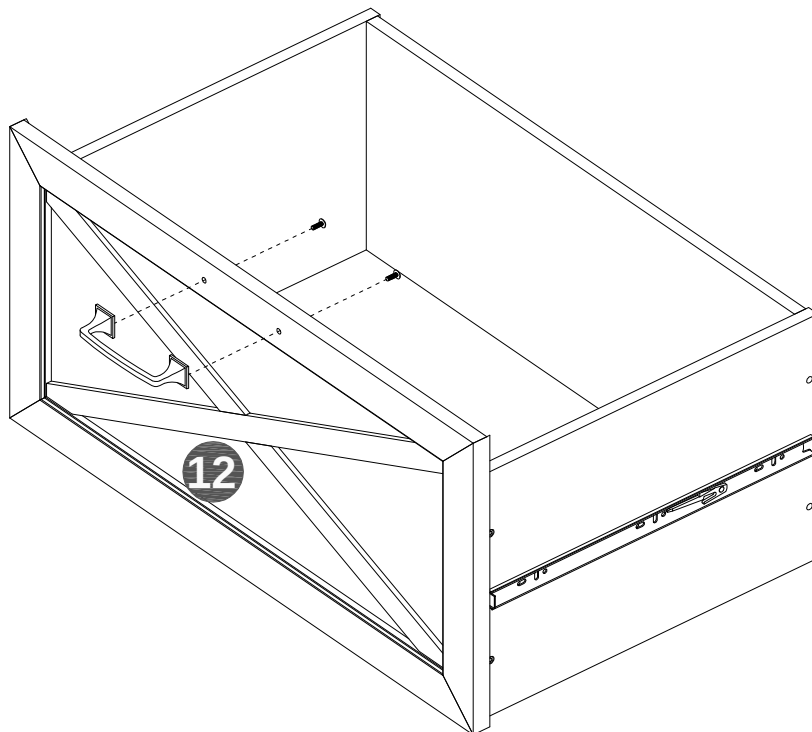

## STEP 16

-Move unit to final location.




-Adjust drawer fronts as shown below.

Step1--Loosen screws on back of drawer front brackets as shown.


Step2--Position drawer front as required.

Step3--Tighten screws while holding drawer front in position.


DRAWER FRONT VIEW

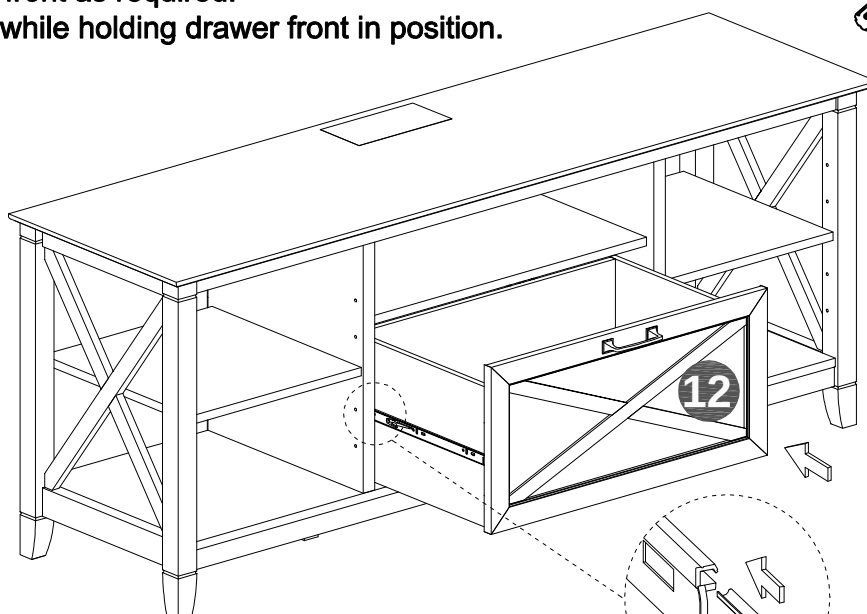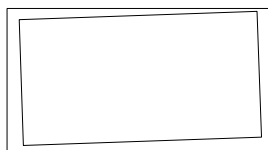



**STEP 1.**

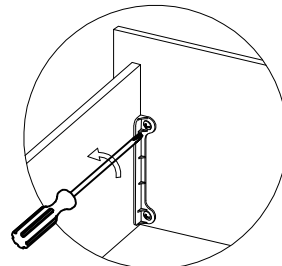

**STEP 2.**

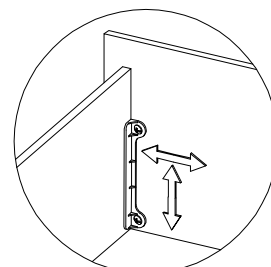



**STEP 3.**

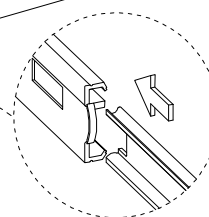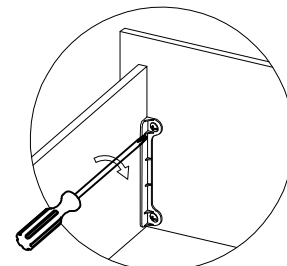


## STEP 17

U<sub>2</sub> x 2pcs 



U<sub>3</sub> x 2pcs 

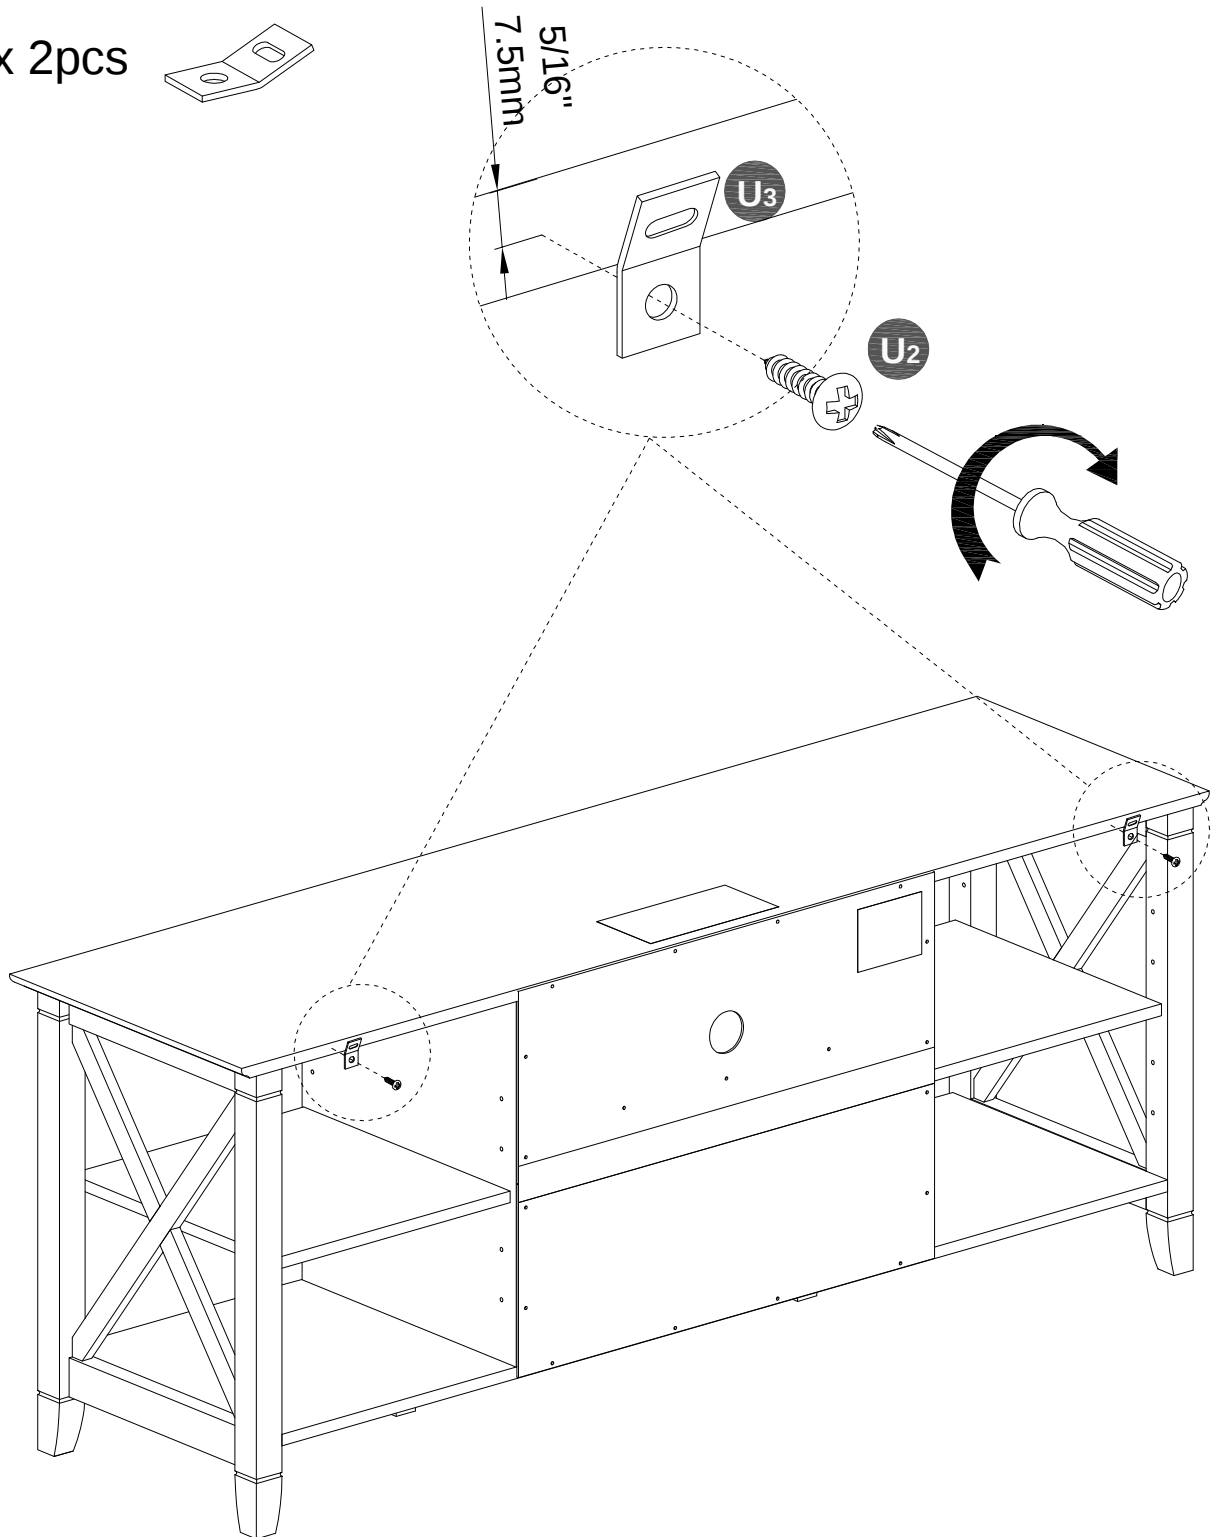

## STEP 18


**U<sub>4</sub>** x 2pcs 

1. Place unit in desired location.
2. Mark stud location on the wall,  
1" below top and side of unit.
3. Drill 5/16" hole 2" deep at marks on  
the wall.



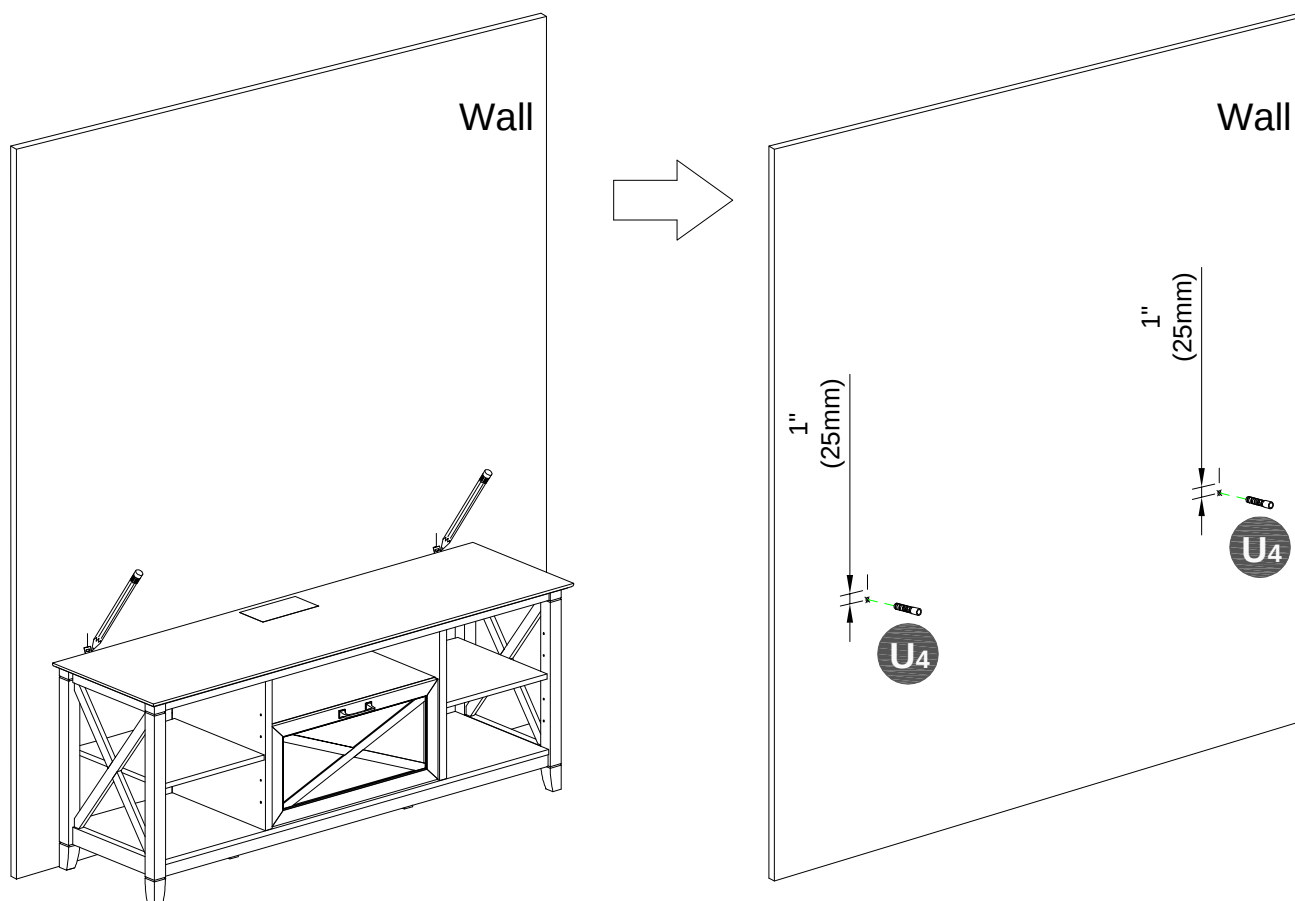
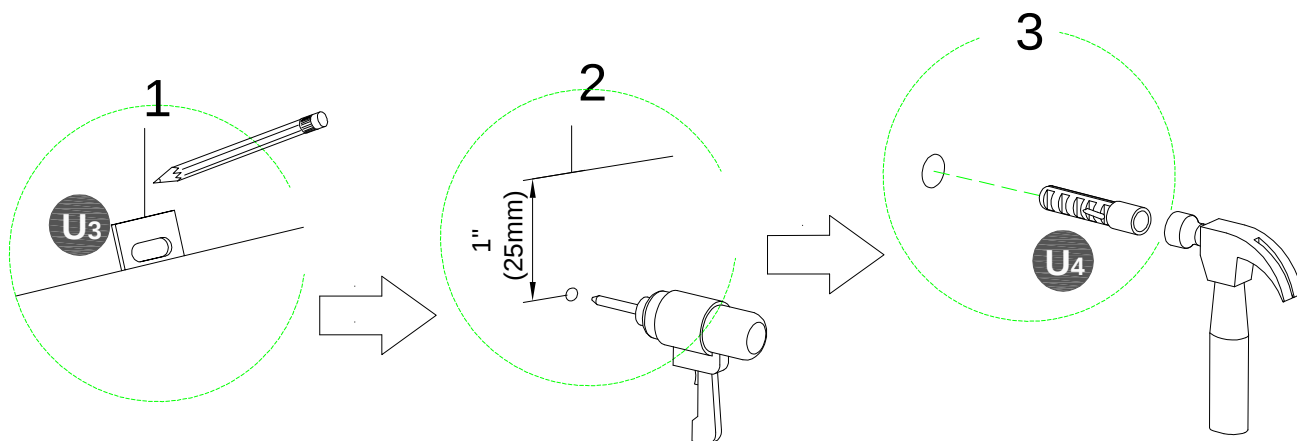


## STEP 19

U<sub>1</sub> x 2pcs 

U<sub>3</sub> x 2pcs 

U<sub>5</sub> x 2pcs

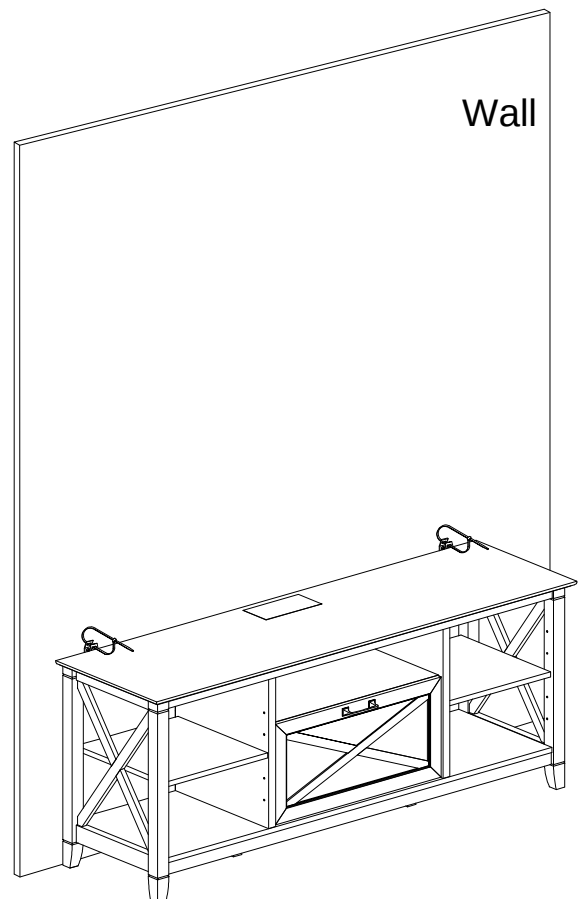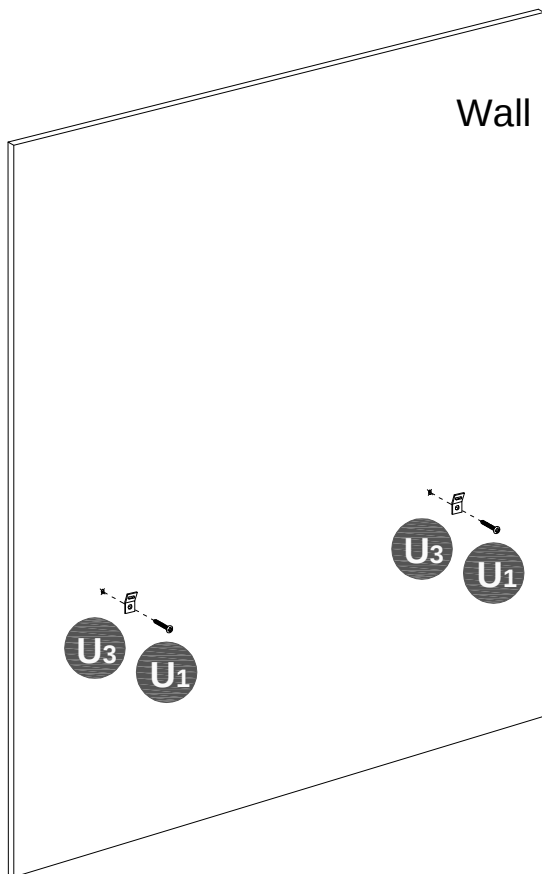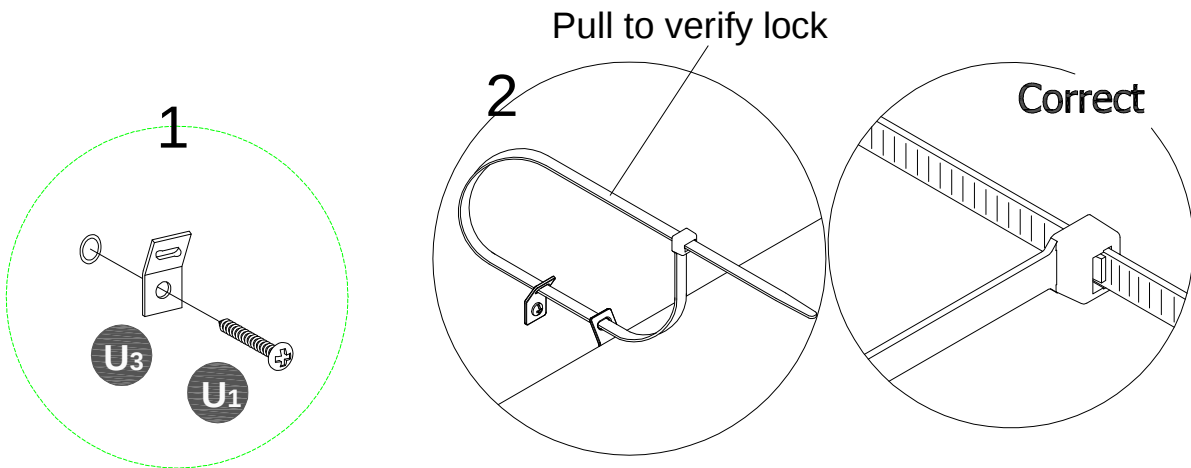

## Maximum weight capacities

